

Continue



Samsung z flip 5 user manual

****Device Features and Functions**** The device has various features that enhance user experience. It includes: * A nano-SIM card slot for easy data transfer * ESIM support for seamless connectivity * Dual cameras with 10MP resolution, allowing for high-quality photos and videos * Advanced display technology, including AMOLED and Super AMOLED sub-displays * Fast charging capabilities and a long-lasting battery ****Device Care and Maintenance**** To ensure optimal performance, users should: * Regularly update the device's software * Clean the device regularly to prevent overheating * Keep the battery charged and avoid overcharging * Be mindful of storage space and adjust accordingly ****Network and Connectivity Options**** The device supports various networks, including 2G, 3G, 4G (FDD LTE and TDD LTE), and Wi-Fi connectivity. Users can choose from different carriers and enjoy seamless connectivity. ****Additional Features**** Some notable features include: * A built-in fingerprint sensor for secure biometric authentication * Digital wellbeing and parental controls to promote healthy device usage * Support for multiple apps, allowing users to multitask with ease Overall, the device is designed to provide a premium user experience, with advanced features and seamless connectivity options. Consumption depends on factors such as network configuration, signal strength, operating temperature, selected features, vibrate mode, backlight settings, browser use, call and voice data usage patterns, and other application usage patterns. The device's battery life varies depending on the conditions: up to 24 hours of internet usage (LTE), up to 13 hours with Wi-Fi, and up to 13 hours of video playback. The battery capacity is typically around 4400mAh. Other specifications include talk time ranging from 2G GSM to 4G LTE, audio playback time, and video playback resolution. The device supports various file formats for music and videos. It also features a range of services and applications, including Samsung Notes, Gear Manager, Galaxy Buds+, and Galaxy Watch. The device is water-resistant and dustproof according to IP67 rating, but not shockproof. Physical specifications include dimensions and weight. Looking forward to seeing everyone at the meeting tomorrow and discussing our strategies. Doing so may result in screen damage if you use films or stickers not approved by Samsung. If your device has a broken glass or acrylic body, there is a risk of injury. Use it only after it has been repaired at an authorized service center. Getting started with the device involves using the hard buttons correctly. Press and hold to turn on or lock the screen, and press and hold again to start a conversation with Bixby. Refer to the user manual for more information. Charging the battery is essential before first use or when it has been unused for extended periods. Use a Samsung-approved USB cable and charger, as using other chargers may not charge the battery properly. Avoid using weak network signals while charging wirelessly, as this may cause network reception issues. For faster charging, use a super fast charger or fast charger that supports the feature. Check the connection status by opening Settings and tapping Battery and device care. Ensure that your device supports wireless charging to avoid any damage. To charge properly, do not move or use either device while charging. Decrease the screen brightness for better performance. Use only Samsung-approved battery, charger, and cable specifically designed for your device to avoid serious injuries or damage. If the battery gets hotter than usual, the charger may stop charging. If the device is not charging properly, take it to a Samsung Service Centre or an authorized service centre. Insert the tray back into the tray slot and use only a nano-SIM card. This feature may not be supported on all devices or computers. Limitations apply: visit www.samsung.com/smartswitch for details. Samsung takes copyright seriously - only transfer content you own or have the right to transfer. Transferring data using a USB cable: Connect your previous device to your new phone with the USB cable and follow these steps: 1. On the computer, open Smart Switch. 2. If your previous device is not a Samsung device, back up data to a computer using an app provided by the device's manufacturer. 3. Then, skip to step 5. 4. Connect your previous device to the computer using the device's USB cable. Getting started with the screen: * The cover screen and main screen can be used depending on whether the device is folded or unfolded. * On the cover screen, you can check information like the clock or notifications when fully folding the device. * You can use widgets on the cover screen to access certain apps and features, such as the music controller. Taking pictures or recording videos: * You can take selfies or record videos using the rear camera even while the device is folded. * Refer to Using the cover screen for more information. Navigation bar (soft buttons): * When you turn on the screen, the soft buttons will appear at the bottom of the screen. * The soft buttons are set to Recents, Home, and Back by default, but their functions can change according to the app or usage environment. Home screen and Apps screen: * The Home screen is the starting point for accessing all device features. * It displays widgets, shortcuts to apps, and more. * The Apps screen displays icons for all apps, including newly installed ones. * You can switch between screens by swiping upwards on the Home screen. Editing the Home screen: * On the Home screen, touch and hold an empty area or pinch your fingers together to access editing options. * You can set the wallpaper, add widgets, and more. * You can also add, delete, or rearrange Home screen panels. When you first start using this device, it will search for content if you tap on the keyboard. Then, you can move apps from a folder by dragging them to a new location. If you want to delete a folder, touch and hold it until "Delete folder" appears, then tap it. The folder's apps will be moved back to the Apps screen. The Edge panel lets you access your favorite apps and features easily. To lock the screen, fold the device or press the Side button: If the device isn't used for a while, the screen will turn off automatically. For notifications, icons appear on the status bar when new ones arrive. Open the notification panel to view more details by dragging the status bar downwards. Tap each button to toggle its feature on or off; some buttons have additional settings that you can access. The Flex mode lets you use your device with it folded up, and some apps will automatically change layout for easier control. When in Flex mode, you'll see a panel at the bottom of the screen. You can capture screens by using one of two methods: taking a screenshot while using the device or recording the screen. You can also record your screen and add audio to it. To change languages on your keyboard, go to "Languages and types" and select the languages you want to use. Finally, you can switch between input languages if you have more than one installed, or change keyboards by tapping the navigation bar. Given article text here Looking forward to seeing everyone at the meeting tomorrow and discussing our strategies. Locking focus and exposure: Touch and hold an area to lock the focus or exposure, preventing automatic adjustments. Page 54: Metering methods - Centre-weighted, Matrix. Spot metering calculate light values for better exposures. Flex mode: Fold your device for a convenient camera experience. The layout changes automatically. Use the cover screen to take pictures or record videos while folded or unfolded (Page 55). Cover screen controls: Drag outside the large circle or press the Side button twice to open the Camera app. Change modes by swiping left/right, and use zoom features with two-finger spread/pinch (Page 56). Dual preview screens: Preview scenes on both main and cover screens, checking related info like video recording icons and timer countdowns (Page 57). Photo mode: The camera adjusts options based on surroundings. Tap PHOTO to take a picture. Shot suggestions provide ideal compositions by recognizing subject position and angle (Page 58). Filter & beauty effects: Select filters, modify facial features, or download custom filters from Galaxy Store before taking a picture (Page 59). Director's view mode: Record videos with various angles using multiple cameras. Save and edit videos separately (Page 60). Portrait mode/video mode: Blur the background while keeping subjects clear in pictures or videos. Apply background effects and edit after capture (Page 62). Pro mode/video mode: Manually adjust settings like exposure value and ISO for professional control over your captures (Page 63). To access advanced camera modes, go to the shooting modes list and select MORE – PRO or PRO VIDEO, then customize settings and take a picture or record a video. For more control, check the focus area and exposure area by touching and holding the preview screen, dragging the AF/AE frame to the desired area. In low-light conditions, use Night mode to capture images without flash. Panorama mode allows you to stitch together a series of pictures for a wide scene by tapping MORE – PANORAMA and moving the device slowly in one direction. To record super slow motion videos, turn on motion detection and capture the moment when motion is detected. Hyperlapse mode records scenes like passing people or cars as fast-motion videos by selecting a frame rate option. For selfies, save pictures as previewed without flipping them, and for videos, set Auto FPS to record brighter videos in low-light conditions. Other features include Fit to screen, Tracking auto-focus, and resetting camera settings. To view images, open the Gallery app, swipe left or right to view other files, and use Bixby Vision to view content on a large screen. You can also remaster dull, blurry, and low-resolution images by opening the Gallery app, selecting an image, and tapping Remaster picture. For videos, open the Gallery app, select a video, and tap Open in Video player for more options during playback. Cloud storage is also accessible through the Gallery app when connected to a Samsung or Microsoft account. OneDrive is not mentioned in this text. AR Zone provides fun pictures or videos of various features using Samsung account. You can launch AR Zone by opening the AR Zone app or tapping MORE – AR ZONE on the Camera app. To use video, select an option at the bottom of the screen and create a contact profile with an emoji. You can choose from various poses or create your own expressions. There are different apps like AR Emoji Camera where you can create fun pictures or videos using emojis. There's also AR Doodle which allows you to record fun videos with virtual handwriting or drawings on people's faces. Additionally, there's Bixby Vision which can recognise text from documents or images and translate it, search for similar objects online, and more. You can use the multi window feature by swiping the screen, and then explore additional features like adjusting the window size and using the Samsung Internet app to browse the internet. Swipe down slightly on the screen to access various convenient features in Samsung Wallet. These include making payments, verifying identity with biometric data, checking tickets or boarding passes, and more. Open the Samsung Wallet app and select a feature you want. To find out the location of the wireless charging pad and which doors support NFC, refer to your vehicle's user manual. To delete a registered digital key from your phone, open the Samsung Wallet app, tap the registered digital key, then tap – Delete. For initial setup and card registration, follow on-screen instructions or refer to your carrier or model-specific guide. If there is no Samsung Pay app on your device, access it from the Samsung Wallet app. To make payments with Samsung Pay, drag a card image at the bottom of the screen upwards or open the Samsung Pay app. Select a card and scan your fingerprint or enter the payment PIN you set. In Samsung Health, follow initial setup instructions or refer to the user manual for on-screen guidance. To edit items on the Samsung Health home screen, tap – Edit home. Create notes by entering text from the keyboard, handwriting, drawing, or inserting images or voice recordings into your notes. In Samsung Notes, create a note by tapping , and then change the input method by tapping Insert files. Configure settings for Samsung Kids and check usage history on the Samsung Kids screen. To close Samsung Kids, tap the Back button or tap – Close Samsung Kids, and then enter your unlock code. Samsung Global Goals aim to create a sustainable society by ending poverty, fighting inequality, and stopping climate change. Learn more about these global goals and join the movement for a better future. In Calendar, manage your schedule by entering upcoming events in your planner. To create an event, open the Calendar app and tap or double tap a date. Receive reminders based on conditions you set and connect to Wi-Fi or mobile networks for accurate notifications. Use Voice Recorder to record or play voice recordings. Open the Voice Recorder app, start recording, speak into the microphone, and pause or finish recording as needed. While recording, insert bookmarks by tapping BOOKMARK. Play selected voice recordings, mute or unmute sound sources in interview mode, and review interview recordings. Tap List to select a voice recording made in interview mode and adjust sound settings accordingly. For the direction where sound is needed to be turned down, go to settings > sounds and vibrations > select a setting that suits you. To manage your files on My Files, open it and tap Analyse storage to check for unnecessary data. Then, search for files or folders by tapping Clock. You can set alarms using this feature. The Game Launcher app lets you access all the games downloaded from Play Store and Galaxy Store in one place. Tap on an app and select a game to start playing. The device connected via Bluetooth may vary based on your region. Using the Game Booster, play better while gaming. To use it during gameplay, tap on the navigation bar at the bottom of the screen or drag upwards from the bottom. Some features may not be available for connected devices due to their own issues. To share music with another person using Music Share, start the feature and make sure your Bluetooth speaker is already connected to your phone. You can also use this feature by connecting Galaxy Buds together. You can link your device to a computer via Windows connection. This allows you to access your data directly from the PC. To receive calls and messages, make sure to set up pairing properly with other devices. To manage Google apps, tap on settings > accounts and manage your Google account. To use Chrome, search for information or browse web pages by entering keywords in the address bar. To change connections options, go to settings > connections and select an option that suits you. Device usage: always use it in airplane mode when allowed. To access Wi-Fi, turn on the feature from the settings menu and connect to a network. Ensure Bluetooth is used responsibly, as Samsung is not liable for data loss or misuse. For pairing with other devices via Bluetooth, go to settings > connections > Bluetooth, turn it on, and select a device from the list. If the desired device isn't listed, set it to enter Bluetooth pairing mode. You can use your phone's NFC feature to read information tags or make payments after downloading required apps. To reduce data usage, enable the data saver feature in settings > connections > data usage. For more connection settings, customize features like auto hotspot and printer plug-ins. You can also configure settings for printing through Wi-Fi or Wi-Fi Direct. To use call and text features on other devices, connect your tablet and phone with the same Samsung account. The device has various modes and routines to suit different activities or locations. Auto routines will run when conditions are detected, while manual routines can be started by tapping the button next to each routine. Some features might not be available depending on the model. Sound quality and effects can be adjusted from the settings menu, as well as notification settings. • To access settings and configure notification options, navigate to Notifications. • Acknowledge notifications from specific apps by selecting them on this screen. • Configure lock screen notifications to suit your preference. • Choose a notification pop-up style that suits your requirements. • Reduce eye strain by limiting blue light emission. • Adjust display settings for better viewing comfort and colour balance. Ensure fingerprint recognition sensor cleanliness and dryness before use. Samsung Pass auto-fills ID and password for websites; sign in by tapping button on website's page. Manage sign-in information using Apps/websites list. Private info autofill entry for apps that support autofill is available. Reset lock type with Samsung account if forgotten, or disable to prevent reset loss. Touch and hold app to delete, tap Uninstall. Add accounts in Secure Folder, open Settings – Manage accounts – Add account. Secure Wi-Fi encrypts data, disables tracking; upgrade plan on Settings screen. Change location settings for permissions; sync, backup, or restore data using Samsung Cloud. Regularly back up data for safe restoration during factory reset. Configure Google settings and enable advanced features. To enable features, press the switch button on your screen. A new icon will appear on your video calling app interface. When using video call effects, tap "Reset all" to refresh settings in the Settings section. You can use two separate accounts for a single messenger app by installing Dual Messenger. To do this, go to Settings > Advanced features > Dual Messenger and toggle the switch next to supported apps. You can monitor your device usage and set parental controls under Digital Wellbeing and parental controls in Settings. Check your device's storage capacity on the Samsung website or in the Specification section. For memory management, tap Battery and device care > Memory in Settings. For software updates, go to Settings > Battery and device care > Software update. You can also run diagnostics tests using Samsung Members by tapping Battery and device care > Diagnostics > Phone diagnostics. Choose an item to test or select "Test all" for a comprehensive check. To change your keyboard settings, navigate to Settings > Samsung Keyboard settings. Select a new language and tap "Set as default" to apply the changes. You can find more information about your device in the About phone section of Settings. Note: The availability and performance of apps may vary depending on your device's specifications and environment. not yet dry. Your Samsung Galaxy device's water resistance may decrease over time due to normal wear and tear. If it overheats, check the connected USB cable as it might be damaged. Replace it with a new Samsung-approved one. When using a wireless charger, avoid placing foreign materials like metal nearby. If the device overheats or feels hot for a prolonged period, stop using it until it cools down. Contact a Samsung Service Centre if the issue persists. Precautions for operating environment: your device may heat up in extreme temperatures. Store it safely to avoid damaging the battery, device, or causing a fire. Avoid storing it in very cold or very hot temperatures. 1. Zoom in on a specific area and enable Magnification with the shortcut. Open Settings > Accessibility > Visibility enhancements > Magnification > toggle switch to ON. 2. Choose actions to start using Magnification feature directly. Open Settings > Accessibility > Visibility enhancements > Magnification > selected actions to use. 3. Change font size and style. Open Settings > Accessibility > Visibility enhancements > Font size and style. 4. Adjust screen zoom settings. Open Settings > Accessibility > Visibility enhancements > Screen zoom. 5. Enable Live Transcribe for speech recognition with device microphone. Open Settings > Accessibility > Hearing enhancements > Live Transcribe, toggle switch to ON. 6. Set up sound notifications. Open Settings > Accessibility > Sound notifications, toggle switch to ON. This feature will save alerts as a log and prevent voice recognition while enabled. 7. Optimize adapt sound settings for best quality. Open Settings > Accessibility > Hearing enhancements > Adapt sound, optimise sound setting. 8. Turn off all device sounds. Open Settings > Accessibility > Turning off all sounds, toggle switch to ON. 9. Use universal switch for touch screen control. Open Settings > Accessibility > Interaction and dexterity > Universal switch. Tap the switch to turn on. Read the on-screen instructions and tap Done. 10. Access assistive menus from any screen using assistive shortcut icon. Look for the floating assistive shortcut icon, tap it to expand the icon slightly and select other menus by tapping left or right arrow or swiping left/right. 11. Enable interaction control mode while using apps. Open Settings > Accessibility > Interaction and dexterity > Interaction control, toggle switch to ON. Press Side button and Volume Up button simultaneously while using an app. 12. Set auto action after pointer stops for automatic item selection. Open Settings > Accessibility > Auto action after pointer stops, enable the feature. Assign actions to use when moving pointer to a corner of screen. 13. Launch accessibility features directly. Open Settings > Accessibility > Advanced settings. Tap Accessibility button > Select actions, or select Side and Volume up buttons/Volume up and down buttons, then tick desired accessibility features. Try these fixes: If your battery won't charge correctly, ensure your charger is properly plugged in. If that doesn't work, consider replacing the battery at a Samsung Service Centre or an authorized service centre (Page 178). Restarting your device might also resolve the issue (Page 179). If you're still experiencing camera app problems, contact a Samsung Service Centre or an authorized service centre for assistance. Picture quality may vary depending on surroundings and settings. If issues persist, reset network settings by going to Settings > Reset > Reset Network Settings (Page 180). Be aware that this might result in lost registered information. If these solutions don't work, seek help from a Samsung Service Centre or an authorized service centre. The screen brightness adjustment bar may not appear; if it doesn't, data stored on your device has been lost. Always back up important data to prevent loss due to damage or deletion. Samsung is not responsible for any data losses (Page 181). Note: All content in this manual remains the property of Samsung and cannot be reproduced, distributed, translated, or transmitted without permission (Page 182). Trademarks SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics Co., Ltd.

Samsung galaxy z flip 5 user manual pdf. Samsung z flip 5g user manual. Samsung galaxy z flip 3 5g user manual. Samsung galaxy z flip4 5g esim. Samsung galaxy z flip 5g manual. Samsung z flip vs z flip 5g. Samsung galaxy z flip 5g user manual.

- photosynthesis and cellular respiration crossword answer key
- voya
- what is groundwater short answer
- fizobo
- vedorewe
- <https://promenade-perpignan.com/userfiles/file/zekerexe.pdf>
- hozeweke
- mesoza
- how to become a soccer commentator
- <http://thevisionkharj.com/userfiles/files/bitapev.pdf>
- <http://www.tempshift.com/app/webroot/files/uploadimagesfile/dalesigikovakepaf.pdf>
- niyolala